## Gel Flocculant Deployment Guidance

## Gravity-fed in-ditch sandbag check dam

Designed by Frog Environmental, using Clearflow Gel Flocculant, this system is used on construction sites to perform separation of fine silts and clayey soils from surface water run-off.


This deployment guide shows how Gel Flocculant can be installed as a low carbon water treatment solution in pipework, negating the need for pumps.

Gel Flocculant is left in situ 24/7, activating on contact with flowing water. This ensures a continuous cost-effective 'rain ready' approach to the management of water quality on site.

Depending on flow rates and silt loading, each block can last up to 120 days and treats water at 200 litres per minute.

Regulatory approval is required prior to the deployment of Gel Flocculant on a construction site. Contact our technical team for specification support, settlement tests and management calculations.


Prior to deployment, consult your Surface Management Plan to confirm your site-specific deployment locations.

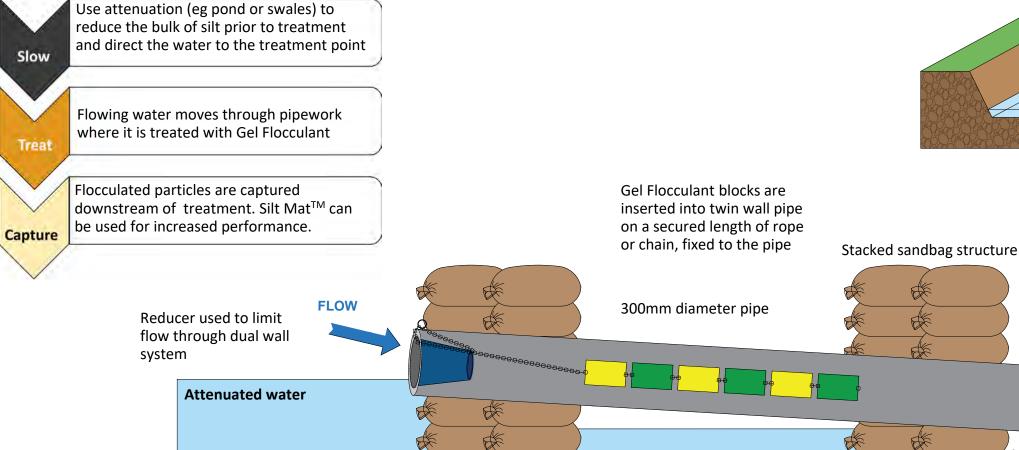

2D Side Elevation





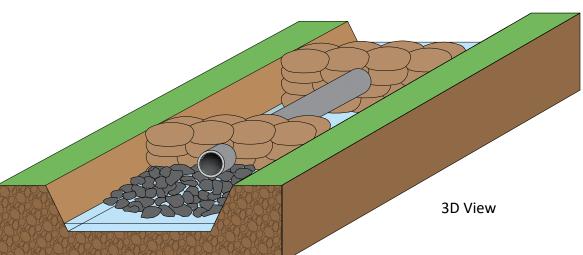

**Drawing Ref:** GF-PD-12v1

**Treated water** 

Revision: v4

Place scour protection at

(clean stone or Silt Mat<sup>™</sup>)

the base of the pipe

**Scale:** Drawings not to scale



Drawings are for guidance only, not for construction purposes. Ensure risk has been assessed prior to deployment of product supplied by Frog Environmental. Further advice available by contacting us at www.frogenvironmental.co.uk/contact-us

©Frog Environmental 2024. No reproduction or re-use without the express written permission of Frog Environmental. All rights reserved.